

Seats (Manual)

■ Adjusting seat position



With the lever raised, slide the seat forward or backward.

■ Adjusting seatback angle



With the lever raised, tilt the seatback forward or backward.

■ Adjusting seat height



- 1 Raises the seat
- 2 Lowers the seat


■ Adjusting the front of the seat cushion



- 1 Raises the front of the seat cushion
- 2 Lowers the front of the seat cushion


Seats (Power)

■ Adjusting seat position

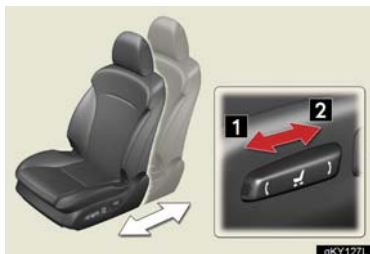

- 1 Moves the seat forward
- 2 Moves the seat backward

■ Adjusting seatback angle

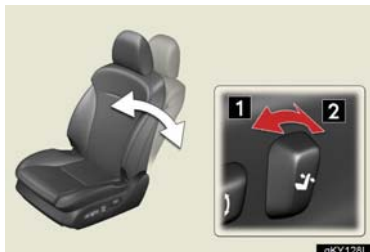

- 1 Tilts the seatback forward
- 2 Reclines the seatback

■ Adjusting the seat cushion



- 1 Raises and lowers the front of the cushion
- 2 Raises and lowers the entire seat


■ Adjusting the lumbar support (driver's seat only)



- 1 Firmer
- 2 Softer

Head Restraints

Vertical adjustment

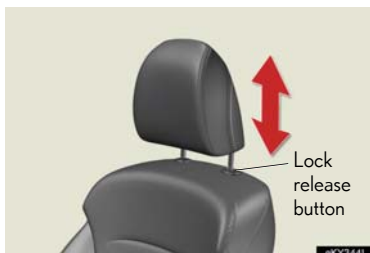

To raise: push the head restraint upward.

To lower (front and center rear seats): push the head restraint down while pressing the lock release button.

To lower (outside rear seats): push the head restraint down.

Folding (outside rear seats only)



Pull the head restraint up while pressing the lock release button.

Seat Belts


Adjusting shoulder belt height (front seats only)



To raise: pull the anchor upward.

To lower: depress the button and push the anchor down.

Seat belt comfort guides (outside rear seats only)

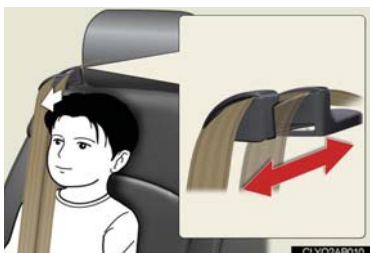

If the shoulder belt sits close to the neck, slide the comfort guide forward.